

 Document no.
 Revision
 Date
 Page

 LTRM Ongoing Care_Rev_0_19 NOV 2018
 Nov 20, 2018
 1 (3)



Better Connection. Better Protection.

Making the **Case** for Aviation.

Long Term Removable Mount LTRM Ongoing Care Instructions





Document no. LTRM Ongoing Care_Rev_0_19 NOV 2018	Revision 0	Date Nov 20, 2018	Page 2 (3)
--	------------	----------------------	------------

Read Before Use

For optimal performance and maximum satisfaction with your PIVOT product, please follow this set of simple instructions.

Purpose

This document provides the necessary information for the correct ongoing care of PIVOT LTRM Mounts.

Extent

This instruction manual is appropriate for all personnel involved in the placement and/or removal of PIVOT LTRM mount.

Reference / Definitions

LTRM Long Term Removable Mount

CA Captain's Side Mount FO First Officer's Side Mount

Responsibility

PIVOT reserves the right to make changes to meet new specifications at any time without incurring any obligation to modify previously installed units. This manual is provided for informational and reference purposes only and is subject to change without notice. Service Bulletins may be issued separately and their effect on this manual will be made evident by reissue of the appropriate list of Service Bulletins. This document can only be changed by an authorized PIVOT engineer.

Illustrations

All visuals in this document are examples being used for explanatory purposes and are not intended to be exact depictions of original parts as described in this document and are subject to change without notice.

Overview

The PIVOT LTRM Mount consists of several parts:

- Contoured attachment plate
- High-deflection AMPS adapter with PPK-1 mounting plate

Total installation time for a shipset (CA and FO) should not exceed 10 minutes. Installation does not require the use of any tools and can be realized by accomplishing the steps which are detailed on the following pages.



Document no.	Revision	Date	Page
LTRM Ongoing Care_Rev_0_19 NOV 2018	0	Nov 20, 2018	3 (3)

Care Instructions

As the PIVOT LTRM products are classified as portable viewable stowage, there are no scheduled maintenance requirements or specific instructions for continued airworthiness. However, the following are suggested actions to assure proper their functionality.

TASK	SUGGESTED INTERVAL	ACTION
Periodic inspection of the CA and FO LTRM base plate	Every 12 months	Visual check that the plate is secured in the manner described in the appropriate LTRM Installation and Removal manual
Periodic inspection of the CA and FO high-deflection AMPS adapter and PPK-1 mounting plate	Every 12 months	Visual check to be sure that the AMPS adapter and PPK-1 mounting plate are in as-new condition with no deformaties or visual indications of wear.
Periodic inspection of the CA and FO tension ring	Every 12 months	Assess the function of the mounting plate as to whether there is a need for an adjustment. With the PIVOT case attached to the LTRM, the case should be firmly positioned but easily adjustable for tilt and orientation with a single hand. needed for case positioning.
		As required, tighten or loosen thge tension ring as needed for ease of case positioning. This may be done with or without the PIVOT case installed on the LTRM.

Additional Information

To learn more, please visit pivotcase.com for instructional videos, product support and additional information about PIVOT products. You'll find valuable online resources provided to enhance your user experience and see the complete line of PIVOT products.

If you have questions, please contact PIVOT Support.



www.pivotcase.com/support



sales@pivotcase.com



1-888-4-FLYBOYS (1-888-435-9269) Outside the U.S.A.: 281-895-0128



www.youtube.com/c/pivotcasevideo



TM and © 2018 FlyBoys Inc. All rights reserved. Designed in USA. Printed in USA.